



Russell Hobbs

"Anything less is second best."



STICK MIXER

MODEL RHSM100

Instructions & Warranty



Russell Hobbs

"Anything less is second best."



 
Russell Hobbs through and through

Russell Hobbs has been synonymous with life in the kitchen for over 50 years. Known, owned and proudly on display in millions of homes across the country. Allow Russell Hobbs to forge a reputation for timeless, stylish appliances in your home.

Complete range of Russell Hobbs products are available at
www.russellhobbs.com.au | www.russellhobbs.co.nz





Salton (Aust) Pty. Ltd. | P.O. Box 683 Braeside Victoria 3195 Australia | Freecall 1800 427 824
Salton NZ Ltd. | P.O. Box 300 201 Albany Auckland 0752 New Zealand | Freecall 0508 629 777

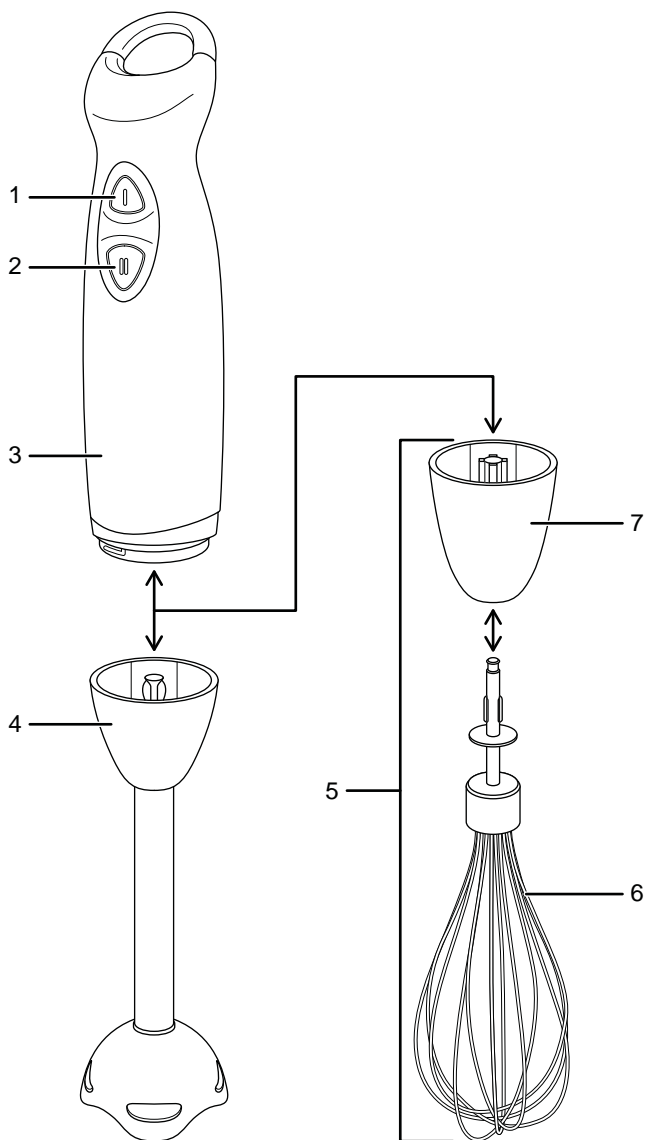

1. Low (I) speed button.
2. High(II) speed button.
3. Motor unit.
4. Mixer shaft.

  5. Whisk.
6. Balloon.
7. Whisk drive.

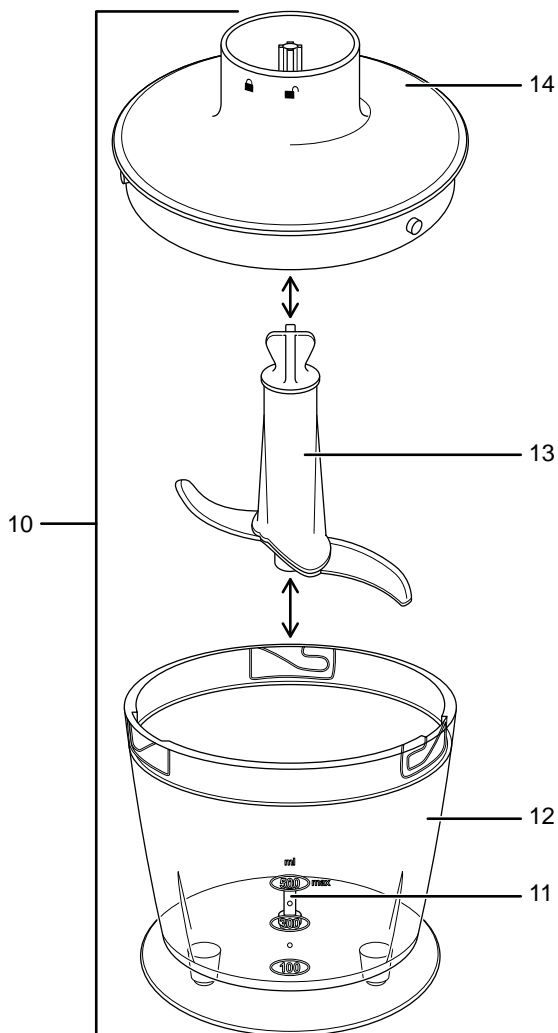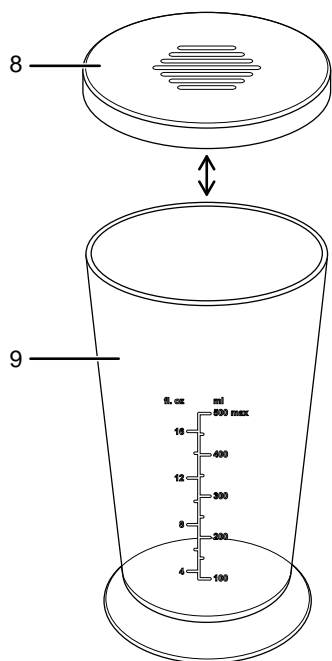

8. Beaker lid.

9. Beaker.

10. Mini-chopper.

11. Mini-chopper central axis.

12. Mini-chopper bowl.

13. Mini-chopper blade.

14. Mini-chopper lid.


Congratulations on the purchase of your Russell Hobbs Stick Mixer. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read this instruction booklet carefully and keep it for future reference. Pass it on if you pass on the Stick Mixer.

When using electrical appliances, basic safety precautions should always be followed.

USING THE MIXER SHAFT

The mixer shaft is ideal for preparing sauces, soups, cocktails, milk-shakes, mayonnaises and baby food preparations.

- Connect the shaft to the motor unit by aligning the arrow ▼ on the motor unit with the unlocked symbol ■ on the shaft. Twist so that the locked symbol ■ and the arrow symbol ▼ are aligned, and the shaft and the motor head are tightly fitted together.
- Insert the plug into a wall power outlet and switch the outlet on.
- To avoid splashing, place the mixer shaft into your preparation before operating the mixer.
- Press and hold the Low (I) or High (II) speed buttons to start the motor.
- Make a rotating, up and down motion to obtain even blending of the food.
- Release the button to stop the motor.
- After use, switch off the wall power outlet and remove the plug.
- To disengage the mixer shaft accessory from the motor unit, twist the shaft so that the arrow ▼ on the motor unit aligns with the unlocked symbol ■ on the shaft.

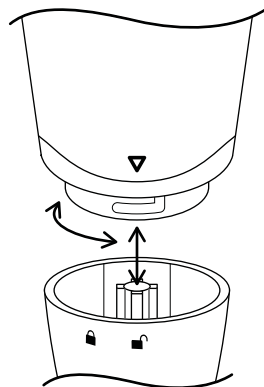

NOTE: Do not operate the stick mixer for more than 1 minute at a time. After operating the appliance continuously for 1 minute, let it cool down for at least 2 minutes before operating again.

USING THE WHISK


The whisk is ideal for preparing pancake mix, stiff egg whites, Chantilly cream, etc.

- To assemble the whisk, insert the shaft of the balloon into the small end of the whisk drive and push in until it clicks into place.
- Connect the whisk to the motor unit by aligning the arrow ▼ on the motor unit with the unlocked symbol ■ on the whisk. Twist so that the locked symbol ■ and the arrow symbol ▼ are aligned, and the whisk and the motor head are tightly fitted together.
- Insert the plug into a wall power outlet and switch the outlet on.
- Press and hold the Low (I) or High (II) speed buttons to start the motor.
- Release the button to stop the motor.
- After use, switch off the wall power outlet and remove the plug.
- To disengage the whisk from the motor unit, twist the whisk so that the arrow ▼ on the motor unit aligns with the unlocked symbol ■ on the whisk.

USING THE MINI-CHOPPER

The mini-chopper is ideal for chopping parsley, onions, hazelnuts, bread crumbs, biscuits, baby food, etc.

- Sit the mini-chopper blade onto the central axis in the mini-chopper bowl.
- Place the food into the bowl.
- Fit the lid onto the mini-chopper bowl, aligning the notches on the lid with the slots on the bowl and twist clockwise until the lid snaps into place.
- Fit the motor unit onto the lid, aligning the arrow ▼ on the motor unit with the unlocked symbol ■↻ on the mini-chopper lid and twist clockwise to align the locked symbol ■ and the arrow symbol ▼.
- Insert the plug into a wall power outlet and switch the outlet on.
- Press and hold the Low (I) or High (II) speed buttons to start the motor.
- Release the button to stop the motor.
- After use, switch off the wall power outlet and remove the plug.
- To disengage the motor unit from the mini-chopper lid, twist the motor unit anti-clockwise so that the arrow ▼ on the motor unit aligns with the unlocked symbol ■↻ on the mini-chopper lid.
- To remove the lid from the mini-chopper bowl, twist the lid anti-clockwise to unlock.

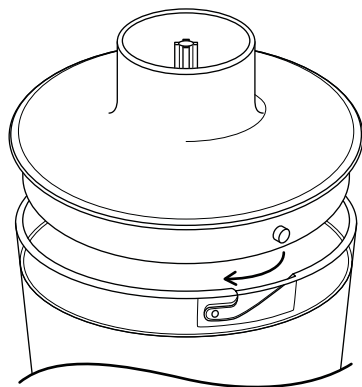

USING THE MINI CHOPPER BOWL IN A MICROWAVE OVEN

You can use the mini-chopper bowl to heat up liquid preparations (soups, etc) in a microwave oven providing you do not add fat and that the metallic central axis of the bowl is covered by the preparation.

PRACTICAL HINTS

- The preparation must at least cover the lower part of the mixer shaft for the mix to be successful.
- Remove the cooking utensil (e.g. saucepan) from the source of heat before blending hot preparations.
- Leave cooked foods to cool for a while before blending/mixing.
- Do not blend food and liquids at a temperature of 80°C or higher.
- For fibrous foods (leeks, celery, asparagus, etc) clean the blender shaft regularly during use. Follow the safety instructions for disassembly and cleaning.
- For fruit-based preparations, first cut up the fruit into manageable sized pieces and remove pips and stones.
- Use short bursts only (5-10 seconds each) when processing hard foods like coffee beans, ice cubes, sugar, cereals and chocolate.
- Do not use the mixer shaft or the whisk in the mini-chopper bowl.

CLEANING

IMPORTANT: Always unplug from the wall power outlet before cleaning.

- Clean the mixer shaft (blade facing upwards), whisk (whisk side facing upwards), beaker, mini-chopper blade and the mini-chopper bowl in the dishwasher.
- Clean the mixer shaft immediately after each use. If the plastic parts become discoloured by food like carrots, rub them with a cloth soaked in cooking oil and then clean as usual.
- Do not immerse the motor unit, whisk drive or mini-chopper lid in water or place in a dishwasher. Clean them with a damp cloth and warm soapy water.

When using electrical appliances, basic safety precautions should always be followed, including but not limited to the following:

IMPORTANT SAFEGUARDS

1. To protect against electrical hazards do not immerse the power cord, plug or stick mixer motor unit in water or any other liquid.
2. Do not use outdoors or in damp or moist areas.
3. Always use the appliance handles when handling.
4. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning. Use a glove or a towel for safety.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Always turn off and unplug from the power outlet before cleaning or removing any part of the appliance.
7. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
8. There are no user serviceable parts. If repairs are required, they must be performed by the manufacturer or a suitably qualified person in order to avoid a hazard.
9. Do not use on an inclined plane or unstable surface.
10. To disconnect, switch off the wall power outlet, then grasp and pull the plug from wall outlet. Never pull by the cord.
11. Keep hands and utensils away from moving blades when in use to prevent the possibility of severe personal injury and damage to the stick mixer. A plastic/silicone scrapper may be used, but only when the stick mixer is not running.
12. Be certain the mini-chopper lid is securely fitted and all fittings such as blades are secure before using.
13. Do not use the stick mixer without the attachments fitted.
14. Always cut food items into manageable pieces before processing.
15. Do not use the stick mixer for extended periods of time. The stick mixer works best in shorts bursts.
16. Ensure the stick mixer is switched off before removing processed contents.
17. Do not overfill the stick mixer containers.
18. Do not place on or near any heat sources.
19. Store the blades in a safe location out of reach of children or infirm persons.
20. Follow the instructions when cleaning this appliance.
21. Clean the appliance after each use.
22. Do not use the appliance for other than its intended purpose.
23. This appliance is not a toy. Children should be supervised to ensure they do not play with this appliance.
24. This appliance is not intended to be operated by means of an external timer or separate remote control system.

CAUTION: *the blades are extremely sharp. Handle with care.*

SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY



Russell Hobbs

Limited 2 year warranty

Thank you for choosing Salton.



Staple receipt here

Nothing in this warranty or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights under the Trade Practices Act 1974 and other relevant legislation.

In addition to your statutory rights, Salton (Aust) Pty Ltd and Salton NZ Ltd (hereafter referred to as "Salton") provide a LIMITED 2 YEAR WARRANTY for this product. Salton warrants this product free from defects in material and workmanship for two (2) years from the date of purchase. Within this warranty period Salton will repair or replace defective parts at no charge. Defective products may be returned to Salton or the place of purchase. Salton recommends you keep your receipt as proof of purchase. If distance prevents you from taking the product to the place of purchase, please call the Salton customer service department freecall within Australia 1800 427 842, or freecall within New Zealand 0508 629 777.

The warranty does not cover improper installation, misuse, abuse or neglect of the product. This warranty also does not cover any product taken apart, altered or serviced by an unauthorised repairer.

Registration of your warranty card is not compulsory, but entitles you to receive these benefits:

- Information on special price offers and promotions,
- Notification of any issues concerning your product.

You can register your product online:

- If you live in Australia please visit www.salton.com.au
- If you live in New Zealand please www.salton.co.nz

OR Fill in the warranty card below and send it to the relevant address shown on the back.



Limited 2 year warranty



Please fill in your warranty card and send to the relevant address shown on the back.

Name: _____

Address: _____

State: _____ Postcode: _____ Country: _____

Phone: _____ Email: _____

Model No: _____ Product: _____

Purchased From: _____ Date of Purchase: _____

Please check the two (2) most important reasons influencing this purchase

- | | | | |
|---|--|---|--|
| <input type="checkbox"/> Received as a gift | <input type="checkbox"/> Recommendation of Salesperson | <input type="checkbox"/> Ease of operation | <input type="checkbox"/> In store demo |
| <input type="checkbox"/> Prior experience with Salton | <input type="checkbox"/> Product features | <input type="checkbox"/> Seen in store | <input type="checkbox"/> Special offer |
| <input type="checkbox"/> Prior experience with Russell Hobbs | <input type="checkbox"/> Salton reputation | <input type="checkbox"/> Seen on television | |
| <input type="checkbox"/> Recommendation of family/friend | <input type="checkbox"/> Russell Hobbs reputation | <input type="checkbox"/> Seen in newspaper/magazine | |
| <input type="checkbox"/> Yes, I wish to receive information regarding new products (email address must be supplied) | | | |

Signature: _____ Date: _____



Before returning to your place of purchase,
call Customer Service for advice.

CUSTOMER SERVICE

AUSTRALIAN CUSTOMER SERVICE

Salton (Aust) Pty. Ltd.
P.O. Box 683
Braeside Victoria 3195
Australia
Freecall: 1800 427 842
Hours: 9am-5pm (EST) Mon-Fri
www.salton.com.au

NEW ZEALAND CUSTOMER SERVICE

Salton NZ Ltd.
P.O. Box 300 201
Albany Auckland 0752
New Zealand
Freecall: 0508 629 777
Hours: 9am-5pm Mon-Fri
www.salton.co.nz

For the latest information on our exciting range of innovative
products for a healthy today and tomorrow visit our website.

[illegible]